

## PART LIST

Item	Description	Item	Description
1	Screw	47	Trigger Valve Stem
2	Bushing	48	O-ring 9.5*1.9
3	Exhaust Cover	49	O-ring 10.3*1.9
4	Seal	50	O-ring 12.8*1.9
5	Muffler	51	Trigger Valve Head
6	Screw	52	O-ring 20.3*2.5
7	Washer	53	O-ring 20.3*1.5
8	Cylinder Cap	54	Valve Guide
9	Gasket	55	Trigger Valve Guide
10	Spring	56	Trigger Spring
11	O-ring 36.3*2.5	57	Rotating Shaft Bushing
12	O-ring 40.2*2.3	58	Trigger Aessmbly
13	Valve	59	Rotating Shaft Pin
14	O-ring 51.7*3.5	60	Screw
15	Valve Seat	61	Drive Guide
16	Screw	62	Plate
17	Stopped Washer	63	Washer
18	O-ring 43.3*3.5	64	Front Plate
19	Piston Assembly	65	Latch Sleeve
20	Collar	66	Latch Assembly
21	Cylinder Seal	67	Spring Pin
22	Cylinder	68	Pin
23	O-ring 52.4*2.5	69	Spring
24	O-ring 51.5*3	70	Restrictive Lever
25	Restrictive Plate	71	Washer
26	O-ring 76.36*2.62	72	Spring Pin
27	Bumper	73	Screw
28	Body	74	Feeder Shoe
29	O-ring 46*1.3	75	Coil Spring
30	Base	76	Spring Seat
31	Screw	77	Pin
32	Spring Washer	78	Nut
33	Spring	79	Support
34	Steel Ball	80	Nut
35	Spring	81	Screw
36	Adjuster Knob	82	Magazine
37	Locking Washer	83	Rail
38	Bracket	84	Screw
39	Nut	85	Stopper
40	Locking Washer	86	Screw
41	Safe Bracket	87	Washer
42	Bracket Sleeve	88	Soft Grip Sleeve
43	Safe Guider	89	O-ring 48.8*2.5
44	Spring Pin	90	End Cap
45	O-ring 5.5*1.5	91	Air Plug
46	Spring		

